


**Thank you for your purchase of the
ULTRA-UC-DISINFECT REPLACEMENT CARTRIDGE SET**

CAUTION!!! – Please ensure to first unplug the UV-LED MODULE (if present) from the power outlet. **Turn Off the Water Supply** at the cold-water line & open the dedicated faucet (to release pressure) before opening/servicing the system. Ensure you **place towels around the leak-stopper device** to absorb any water that may come near it and prevent it from triggering.

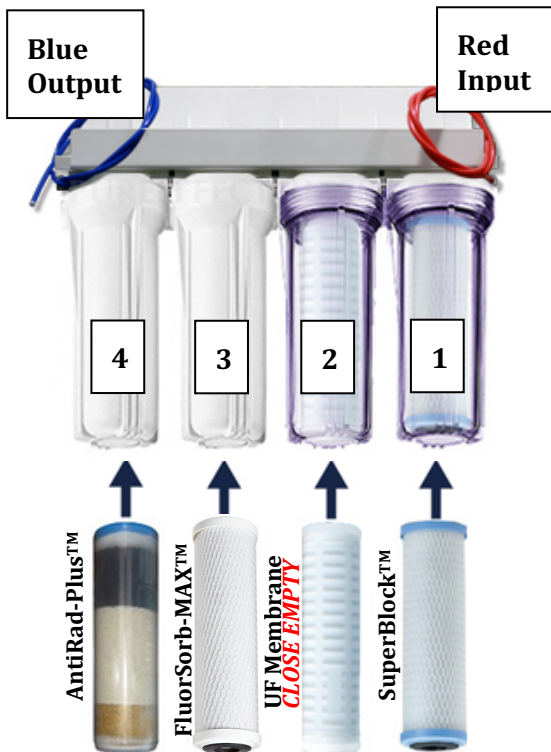

❑A. Remove Shrink Wrapping and insert the cartridges as follows:

Chamber #1 - SuperBlockTM

Chamber #2 - *Close Empty* for now.

Chamber #3 - FluorSorb-MAXTM

Chamber #4 - *Close Empty* for now.

**We recommend to hand tighten housings when closing to avoid over-tightening. Use wrench only if still leaking.*

Note: If you're re-using your existing UltraFiltration Membrane, it must first be sanitized: Soak in 10-15% Hydrogen Peroxide for 60 min or in 3% for 12 hours in a glass container (e.g. vase); **Or** Steam (**DO NOT BOIL**) for 30 minutes (e.g. in strainer, covered and low flame). Rinse well and place back into unit.

❑B. If you have the Gallon-Meter: Reset it to 500 gallons. (See instructions that came with it).

❑C. If you have the UV-LED: Bypass it for initial flush by connecting the faucet's blue tube directly to filter OUT.

❑D. Slowly turn on the cold-water valve, check all connection points on filter for leaks.

❑E. Open the filter's faucet and let the water run on full for **5 minutes** then shut off water supply to filter via the cold-water valve. Leave filter's faucet "on" to release water pressure.

❑F. Insert the **2nd** cartridge (UltraFiltration Membrane) into **Chamber #2** and the **4th** Cartridge (AntiRad-PlusTM) into **Chamber #4**, flush the entire system again for **10 additional minutes**, reconnect the blue faucet tube to the **UV OUT**.

Note: Water may be cloudy from harmless minerals for about a week as cartridges adapt; to speed-up the adaptation: Run the system in 15-20 second bursts more often throughout the day.

YOUR SYSTEM IS NOW READY FOR USE!

***To Disconnect
the tubing from
any connections:**



***For Reference, Installation Diagram on Back →**

UNDERSINK DIAGRAM (For Verification & Reference)

